

ACCUSPLIT[®]

PRO SURVIVOR

STOPWATCH



STOPWATCH OPERATIONS


For Typical Uses

Press C until at STOPWATCH display.
If necessary, Press R to Stop and
L to Reset to zero.

Event	Split	1-2 Finish
R-Start	R-Start	R-Start
R-Stop	L-Split	L-Stop #1
(Repeat R,R	L-Release	R-Stop #2
time-in/	(Repeat L,L	(See #1 time)
time-out)	each Split)	L-Release
L-Reset	R-Stop	(See #2 time)
	L-Reset	L-Reset

TIME AND CALENDAR DISPLAY

- Press C, until at TIME display.
- Hold R—display Month, Date and PM indicator (P).
- Hold L—display MEMO TIME
(Professional X Stopwatch Series do not have Sound Alarm or Chime).

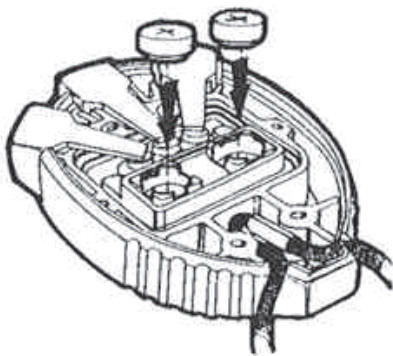

TO SET TIME AND CALENDAR

- Hold C for 3 seconds and Press C once to enter TIME SET MODE.
- Press R to select Minutes, Hour, Month, Date, Day, Seconds.
- Press L to change any of the above.
(Seconds only resets to 00).
(Hold L to change digits rapidly).
- Press C to return to TIME display.

TO SET MEMO TIME

- Hold C for 3 seconds to enter MEMO TIME SET MODE.
- Press R to select Minutes and Hours.
- Press L to change Minutes and Hours.
- Press C to return to TIME display.

TO SET 12/24 HOUR FORMAT

- Hold R and Press C to interchange 12P or 24 format.

BATTERY CHANGING

See Specifications panel.

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check

<http://support.ACCUSPLIT.com>

ACCUSPLIT, Inc. • 6120 Stoneridge Mall Rd., Suite 210 • Pleasanton, CA 94588 USA
800-965-2008 • 925-226-0888 • FAX 925-463-0147 • www.ACCUSPLIT.com • support@ACCUSPLIT.com

1-800-965-2008 or 1-925-226-0888

FAX: 925-463-0147

repair@accusplit.com

www.accusplit.com

ASSEMBLED IN PRCHINA

© 2004 ACCUSPLIT